

Installation Instructions

Original Instructions



Allen-Bradley

by ROCKWELL AUTOMATION



Minotaur MSR142RTP Monitoring Safety Relay

Catalog Numbers 440R-G23214, 440R-G23215, 440R-G23216, 440R, MSR142RTP

Summary of Changes

This publication contains the following new or updated information. This list includes substantive updates only and is not intended to reflect all changes.

Topic	Page
Updated Declaration of Conformity	4

Introduction

This device is intended to be part of the safety-related control system of a machine.

IMPORTANT Before installation, perform a risk assessment to determine whether the specifications of this device are suitable for all foreseeable operational and environmental characteristics of the machine to which it is to be fitted. At regular intervals during the life of the machine, check whether the characteristics foreseen remain valid.



WARNING: Danger of serious injuries. Misuse can result in malfunction.

- Only authorized and trained personnel can start up, assemble, or retrofit the device.
- Installation must be in accordance with the following steps.



WARNING: Danger of serious injuries. Incorrect installation or manipulation can result in serious injuries. Do not defeat, tamper, remove, or bypass this unit.



ATTENTION: If any malfunction or damage is present, do not attempt to repair. Replaced the unit before machine operation is allowed. Do not dismantle the unit.

Rockwell Automation does not accept responsibility for failure of this device if you do not implement the procedures that are given in this publication, or if you use the unit outside the recommended specifications that are listed in this publication.

IMPORTANT The safety inputs of these products are described as normally closed (N.C.), that is, with the guard closed, the actuator in place (where relevant), and the machine able to start. You must prevent exposure to shock and/or vibration in excess of those specifications in IEC 60068 part: 2-6/7. Adherence to the recommended inspection and maintenance instructions forms part of the warranty.

IMPORTANT All information complies with the state of this publication and is subject to change without notice.

Description

The safety relay enables once the supply powers-up and the safety circuits close. The PWR status indicator is on.

A valid reset operation activates safety outputs. The output status indicators CH1 and CH2 are lighted. At the demand of the safety function and if any fault occurs, the safety outputs de-energize within the specified response time.

IMPORTANT Reset if a fault occurs.

If any fault occurs, the internal relay circuit forces a lockout of the safety relay. The status indicator of one output channel remains lighted. To enable the safety relay, remove the fault and cycle all safety inputs.

Specifications

Table 1 - Technical Specifications

Attribute	Value
	According to ISO 13849-1: <ul style="list-style-type: none">PL_E, Cat. 4MTTF_d[a]: 200DC average: 99%
Functional safety data	According to IEC 62061 and IEC 61508: <ul style="list-style-type: none">SIL CL 3PFH [f/h]: 290E-09HFT: 1DC: 99%
	<ul style="list-style-type: none">TM [PTI][a]: 20dop [d]/hop [h]⁽¹⁾: 365/24tcycle [h][s]⁽²⁾: 8/28,800
Power supply	24V AC/DC, 115V AC, 230V AC 0.85...1.1 x rated voltage 50/60 Hz
Power consumption	5 W
Safety inputs	1 N.C., 2 N.C., 2 PNP light curtain, and safety mat
Input simultaneity	Infinite
Allowable input resistance, max	45 Ω
Reset	Manual monitored or automatic/manual
Outputs	7 N.O. safety, 4 N.C. auxiliary, 1 SS PNP inputs closed, 1 SS PNP outputs active <ul style="list-style-type: none">UL: 4 x B300, 4 x R300 1 x 6 A or 7 x 4 A resistive/ 250V AC, 24V DC, solid-state I/O class 2AC-15: 6 A/250V ACDC-13: 3 A/24 V DC
Output rating	<ul style="list-style-type: none">30V DC20 mA short circuit protected
Fuses output (external)	6 A slow blow or 10 A quick blow
Switched current/voltage, min	10 mA/10V
Contact material	AgSnO ₂ + 0.5μAu
Electrical life (operations)	<ul style="list-style-type: none">100,000 (220V AC/4 A/880VA cosφ = 0.35)500,000 (220V AC/1.7 A/375VA cosφ = 0.6)1,000,000 (30V DC/2 A/60 W)2,000,000 (10V DC/0.01 A/0.1 W)
Mechanical life	10,000,000 cycles
Power on delay	1s

Table 1 - Technical Specifications (Continued)

Attribute	Value
Response time	15 ms
Recovery time	100 ms
Impulse withstand voltage	2500V (external wiring according to rated voltage)
Pollution degree	2
Installation group	Overshoot category III, VDE 0110-1
Operating temperature	-5...+55 °C (23...131 °F)
Relative Humidity	90%
Enclosure protection	IP40 (NEMA 1)
Terminal protection	IP20
Wiring	Use copper that withstands 60/75 °C (140/167 °F)
Conductor size	0.2...2.5 mm ² (24...12 AWG)
Torque settings	Terminal screws: 0.6...0.8 N·m (5...7 lb·in)
Case material	Polyamide PA 6.6
Mounting	35 mm (1.38 in.) DIN rail in enclosure to a minimum of IP54
Weight	24V AC/DC: 470 g (1.04 lb) 115V AC or 230V AC: 607 g (1.34 lb)
Vibration	10...55 Hz, 0.35 mm (0.01 in.)



(1) Operation time (day, hour)
 (2) Cycle time (hour, sec)

(2) 2-CH = Dual-channel

Reset

- Reset modes - The reset mode is configurable for automatic/manual start and manual monitored reset (MSRxXXRT).
- A valid start/reset can only operate if the feedback circuit is closed. Feedback contacts (N.C.) of controlled actuators connect to Y1-Y2.
- T - Automatic/manual start^(a)

In Automatic/Manual Start mode, the reset circuit S33-S34 is not monitored against signal changes (no edge detection). The safety relay is active once the safety inputs and the reset circuit close. If the safety inputs and reset circuit concurrently close during power-up, the safety relay activates immediately.

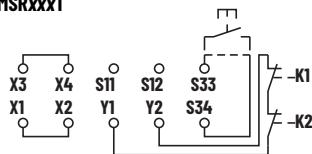
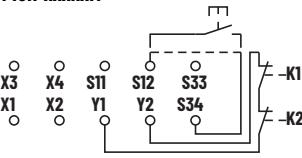
MSRxXXT**MSRxXXT
440R-xxxxM**

- R - Manual monitored reset^(b)

In Manual Monitored Reset mode, a signal change of the reset circuit (S33-S34) is required and monitored. A reset fault occurs if the safety inputs remain open while the reset circuit is closed.

- Positive edge:

The safety relay is active once the safety inputs close and then the reset circuit is closed.

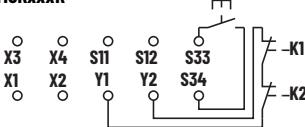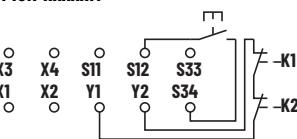MSRxXXR**MSRxXXR
440R-xxxxM**

- R Negative edge (440R-xxxxM):

The safety relay is active once the safety inputs close and then the reset circuit closes and releases again. The circuit resets upon release of the Reset button.

**MSRxXXR
440R-xxxxM**

For both methods, the MSR142RTP safety relay is suitable for the safety requirements according to EN/ISO 13849-1.

(a) T = Jumper X1-X2, X3-X4


(b) R = No jumper

(1) 1-CH = Single-channel

Installation


Do not install this product until the installer obtains a copy of the instructions of the manufacturer, in a language that they can understand. This instruction publication is available in multiple languages at rok.auto/literature.

Figure 1 - Mounting

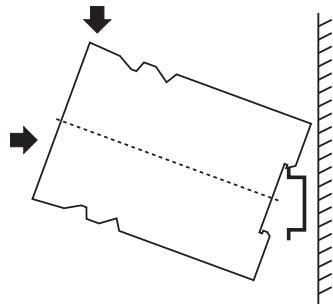

Mount the enclosure to a minimum of IP54.


Figure 2 - Removable Terminals (P versions only)

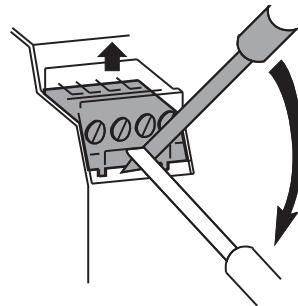

To remove the terminals, insert a screwdriver and slowly move as shown in [Figure 2](#).

Wiring Examples

Figure 3 - Dual-channel E-stop, Monitored Manual Reset, Monitored Output

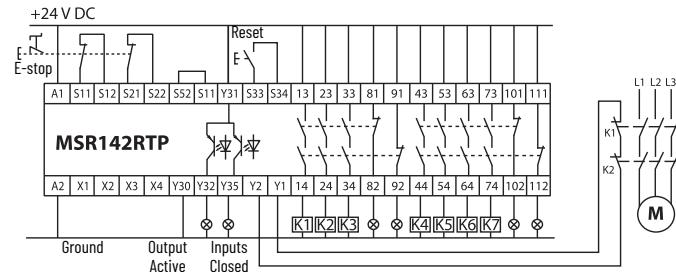

Circuit Diagram

Figure 4 - Diagram


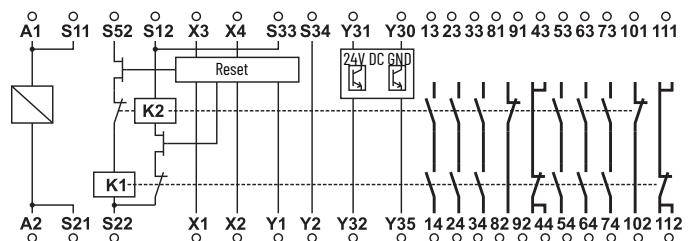


Table 2 - Circuit Diagram Explanation

Abbreviation	Description
A1, A2	Power
S11, S12, S21, S22	Safety input (N.C.)
X1, X2, X3, X4, S33, S34	Link for auto reset
Y1, Y2	Monitoring loop feedback
13, 14/43, 44	Safety output 1 (N.O.)
23, 24/53, 54	Safety output 2 (N.O.)
33, 34/63, 64/73, 74	Safety output 3 (N.O.)
81, 82/101, 102	Auxiliary output CH1 (N.C.)
91, 92/111, 112	Auxiliary output CH2 (N.C.)
Y31, Y32, Y35	Auxiliary PNP semiconductor output
PWR	Status indicator illuminates green when the unit is powered, flashing green if cross-loop faults occur
CH1	Status indicator illuminates green when the safety output channel 1 activates
CH2	Status indicator illuminates green when the safety output channel 2 activates
CH1 IN	Status indicator illuminates green when the safety input channel 1 closes
CH2 IN	Status indicator illuminates green when the safety input channel 2 closes
Start	Status indicator illuminates green when the reset circuit closes

Approximate Dimensions

Figure 5 - Dimensions [mm (in.)]

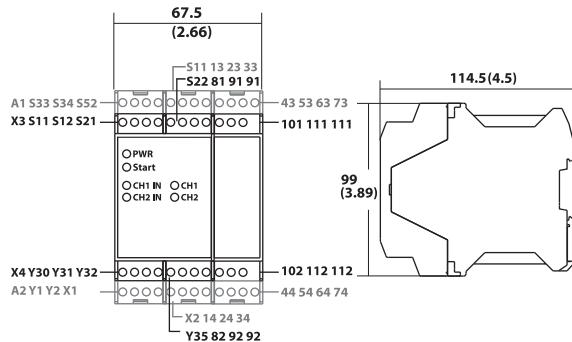


Safety Specifications

You can use the MSR142RTP safety relay in safety circuits according to DIN EN 60204-1/VDE 0113 part 1. Safety requirements that are specified in [Specifications on page 1](#) are maximum, based on the operation mode and wiring.

Specifications are applicable only if the safety function is demanded at least once within 6 months. All diagnostic tests are conducted at least before next demand. The mission time (TM) for the proof test interval (PTI) is adopted. Components failure rates according to SN29500.

Figure 6 - Example Safety Circuits

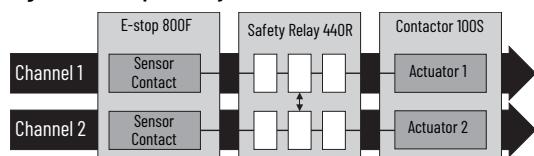

Declaration of Conformity

CE Conformity

Rockwell Automation declares that the products that are shown in this document conform with the Essential Health and Safety Requirements (EHSRs) of the European Machinery Directive (2006/42/EC) and EMC Directive (2014/30/EU).

For a comprehensive CE certificate visit: [rok.auto/certifications](#).

UKCA Conformity

Rockwell Automation declares that the products that are shown in this document are in compliance with the Supply of Machinery (Safety) Regulations (2008 No. 1597) and Electromagnetic Compatibility Regulations (2016 No. 1091).

For a comprehensive UKCA certificate visit: [rok.auto/certifications](#).

Waste Electrical and Electronic Equipment (WEEE)



At the end of life, this equipment should be collected separately from any unsorted municipal waste.

Rockwell Automation maintains current product environmental compliance information on its website at [rok.auto/pec](#).

Your comments help us serve your documentation needs better. If you have any suggestions on how to improve our content, complete the form at [rok.auto/docfeedback](#). For technical support, visit [rok.auto/support](#).

Rockwell Otomasyon Ticaret A.Ş, Kar Plaza İş Merkezi E Blok Kat:6 34752, İçerenköy, İstanbul, Tel: +90 (216) 5698400 EEE Yönetmeliğine Uygundur

Connect with us.

[rockwellautomation.com](#)

expanding **human possibility**®

AMERICAS: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

EUROPE/MIDDLE EAST/AFRICA: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

ASIA PACIFIC: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

UNITED KINGDOM: Rockwell Automation Ltd, Pitfield, Kiln Farm Milton Keynes, MK11 3DR, United Kingdom, Tel: (44)(1908) 838-800, Fax: (44)(1908) 261-917

Allen-Bradley, expanding human possibility, Guardmaster, Minotaur, and Rockwell Automation are trademarks of Rockwell Automation, Inc.
Trademarks not belonging to Rockwell Automation are property of their respective companies.

Publication 440R-IN089A-EN-P - July 2022 | Supersedes Publication 440R-IN064A-MU-P - April 2011
Copyright © 2022 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.

95302188

10000176982 Ver 01