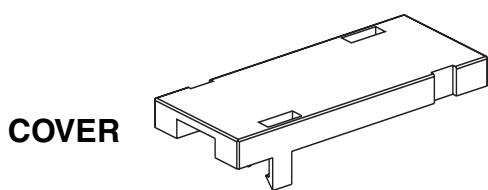
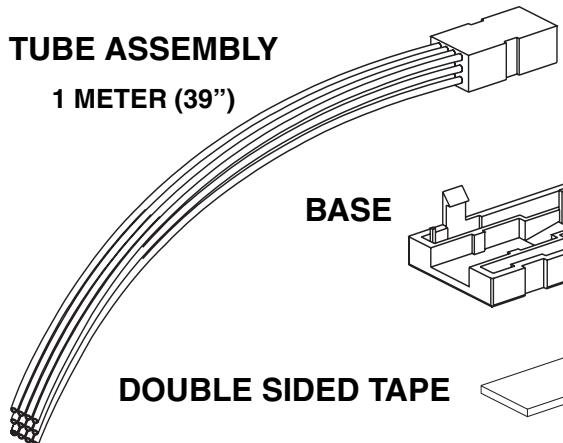
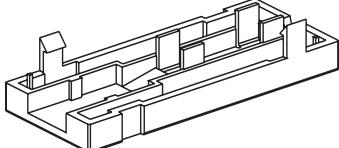


CONTENTS


COVER

TUBE ASSEMBLY

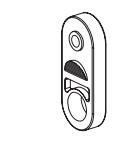

1 METER (39")
BASE

DOUBLE SIDED TAPE


REQUIRED TOOLS

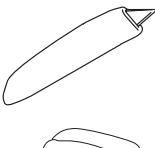
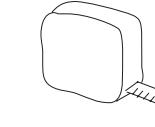

CABLE JACKET STRIPPER (CST-115)

ADHESIVE TAPE

LINT-FREE WIPES (FWP-C)

GEL CLEANER

CABLE STRIPPING TOOL (CJT)

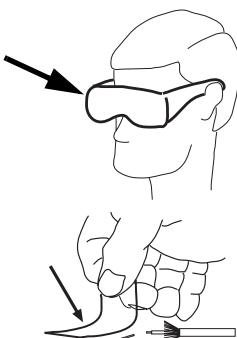
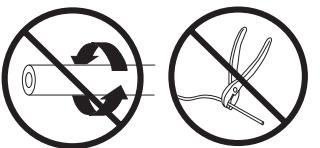
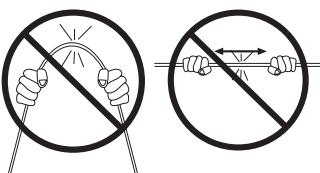
ARAMID YARN CUTTER (FKC)

MARKING PEN (PFX-0)

UTILITY KNIFE

TAPE MEASURE

PRECAUTIONS

1. SAFETY GLASSES

WARNING: It is strongly recommended that safety glasses be worn when handling bare optical fiber. The bare fiber is very sharp and can easily damage the eye.


CAUTION


3. LASER LIGHT PROTECTION

WARNING: Laser light is invisible. The invisible light is powerful enough to damage your eyes. Serious damage to the retina of the eye is possible. Never look into the end of a fiber which may have a laser coupled into it. Should accidental eye exposure to laser light be suspected, arrange for an eye examination immediately.

4. CABLE HANDLING

WARNING: Fiber optic cable can be damaged by excessive pulling, twisting, crushing or bending stresses. Consult the appropriate specification sheets as provided by your cable vendor. Any damage may result in decreased optical performance.

1. Prepare cable according to cable manufacturer's instructions. Make sure the fibers are free of all gel.
2. Lay the cable on a table as shown in Fig. 1.
3. Lay the loose tube on the base between the metal tabs. Tape the loose tube to the table.
4. Using the cable jacket stripper, squeeze the metal tabs together until the loose tube begins to dent. **DO NOT CRUSH THE FIBERS WITHIN THE TUBE!**
5. Tape the tube assembly securely to the edge of the table as shown in Fig. 2.
6. Carefully thread each fiber into the tube assembly. Match the fiber colors to the colors of the tubing.
7. When the tube assembly is loaded, remove it from the edge of the table.
8. Slide the tube assembly toward the base making sure that the fibers do not bend, kink, or twist as shown in Fig. 3.
9. Place the tube assembly into the base.
10. Snap the cover on top of the base.
11. Use the double sided tape to mount the base as needed.
12. Repeat for each loose tube of fibers.

